

H4-450 Copter Assembly

All spare parts are include as follows





Firstly, you need to prepare the hex driver and socket by yourselves





H2.0-H2.5 Hex driver 4 in 1; H3/16 socket; 5.5 box socket

1. Main frame assembly

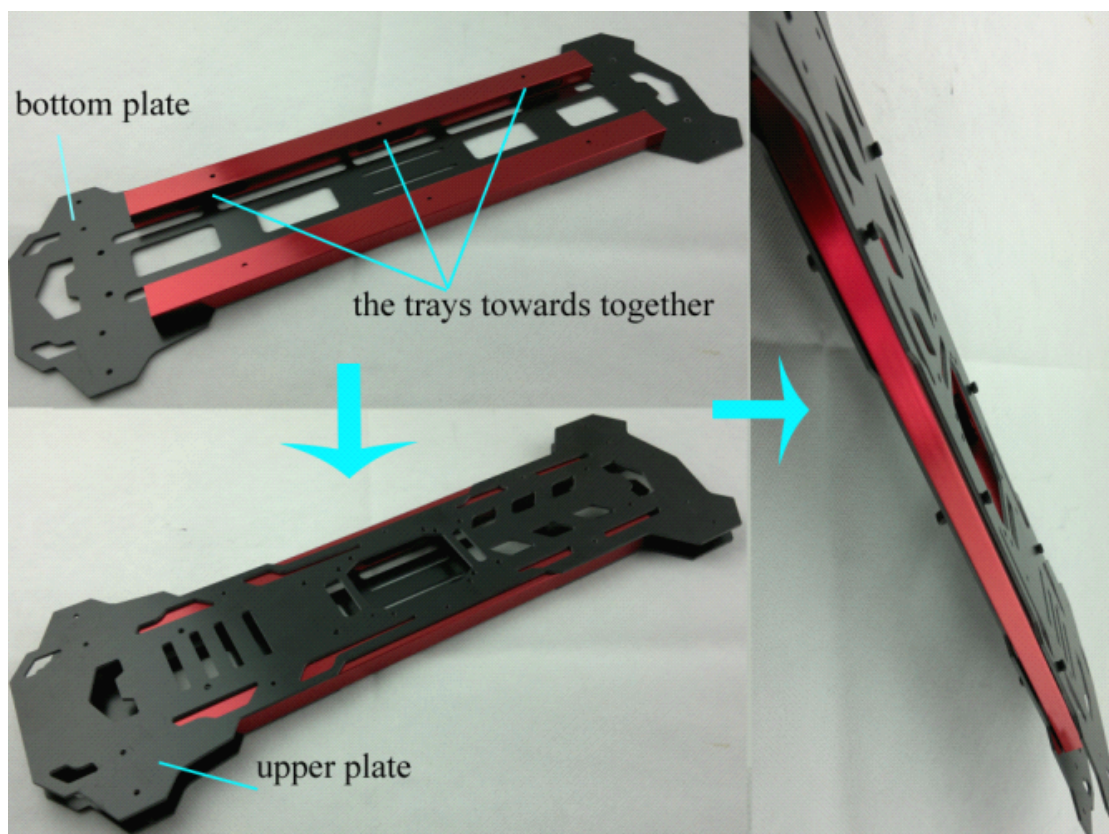
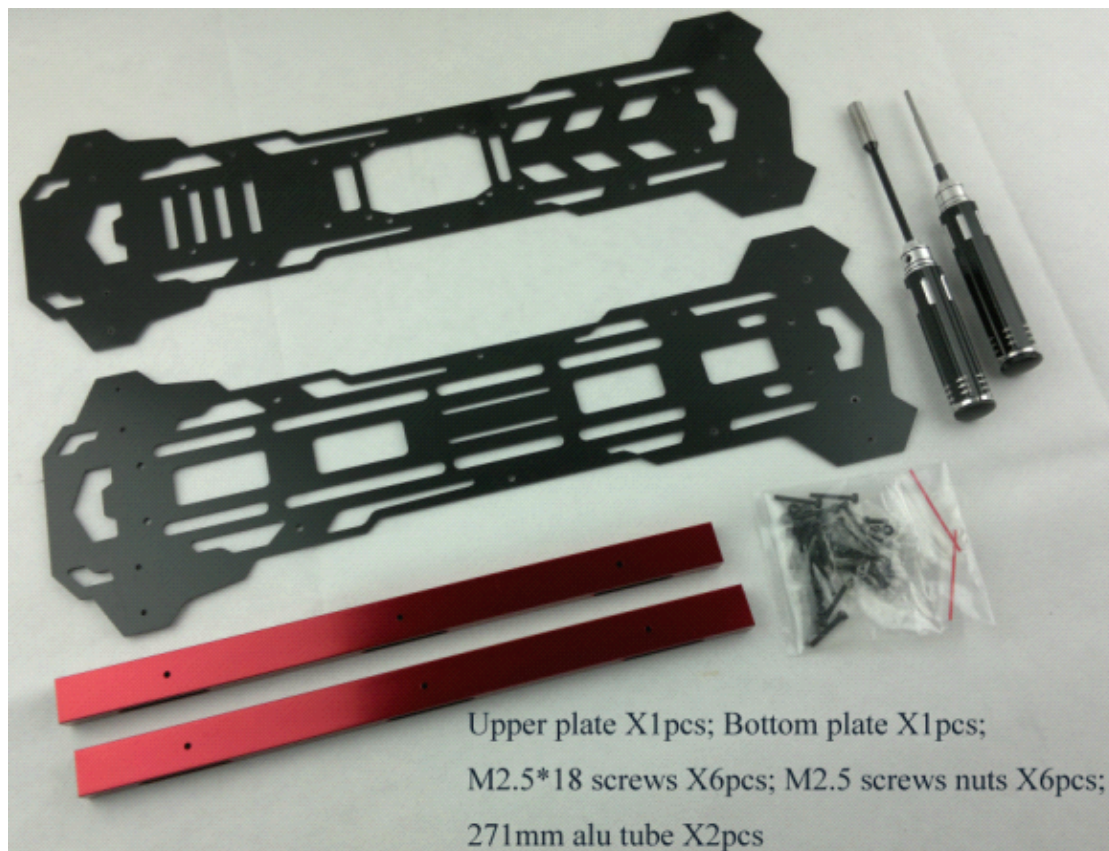


2. Controller board assembly

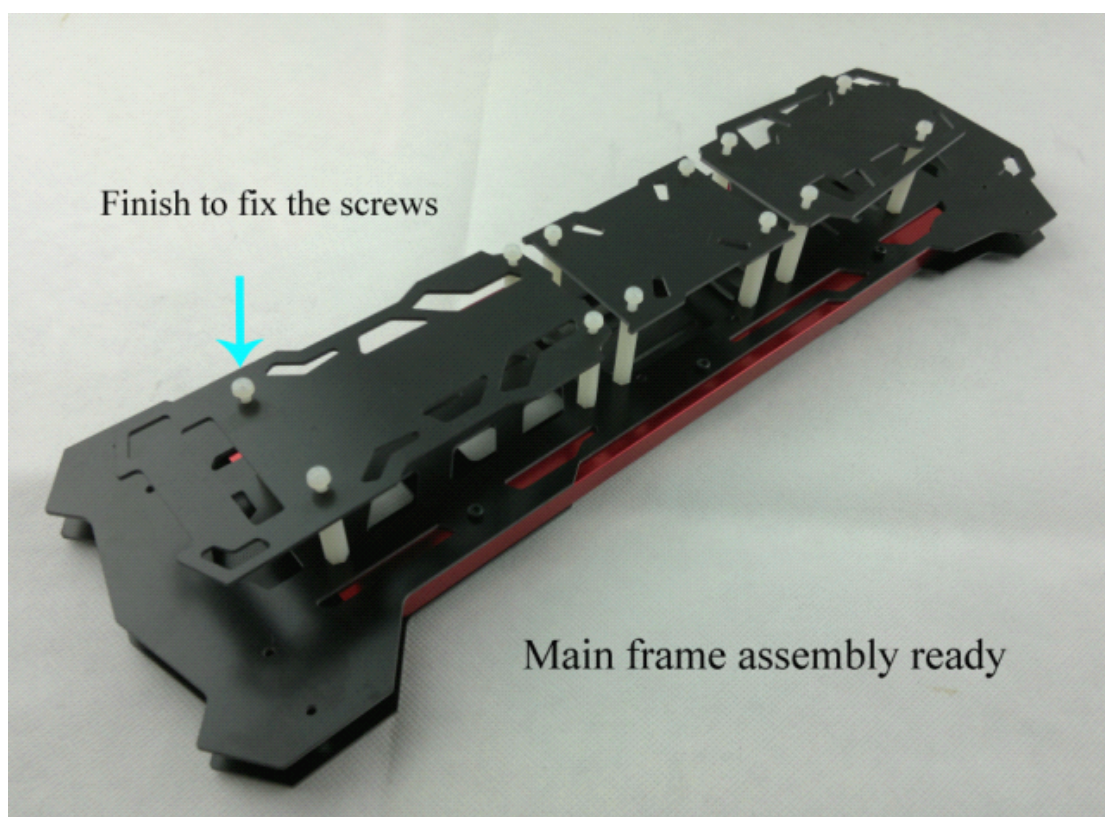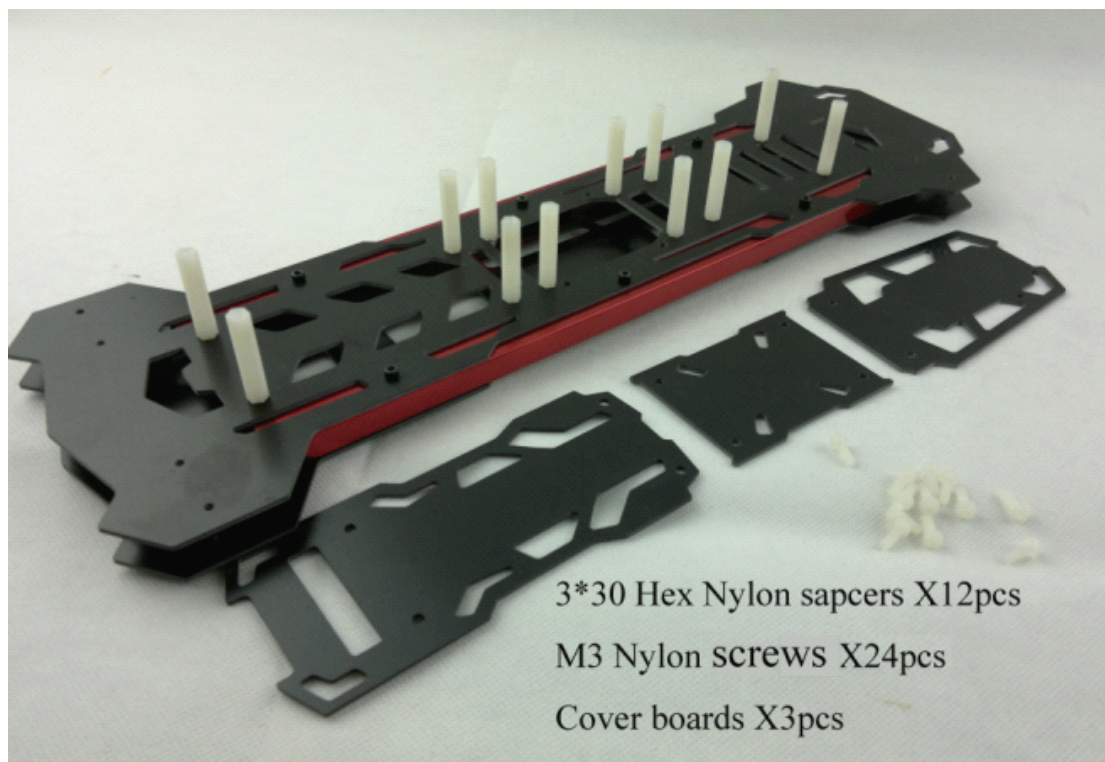


Nylon spaces and screws are soft and elastic, please fix them carefully

3. Motor mount & arms assembly

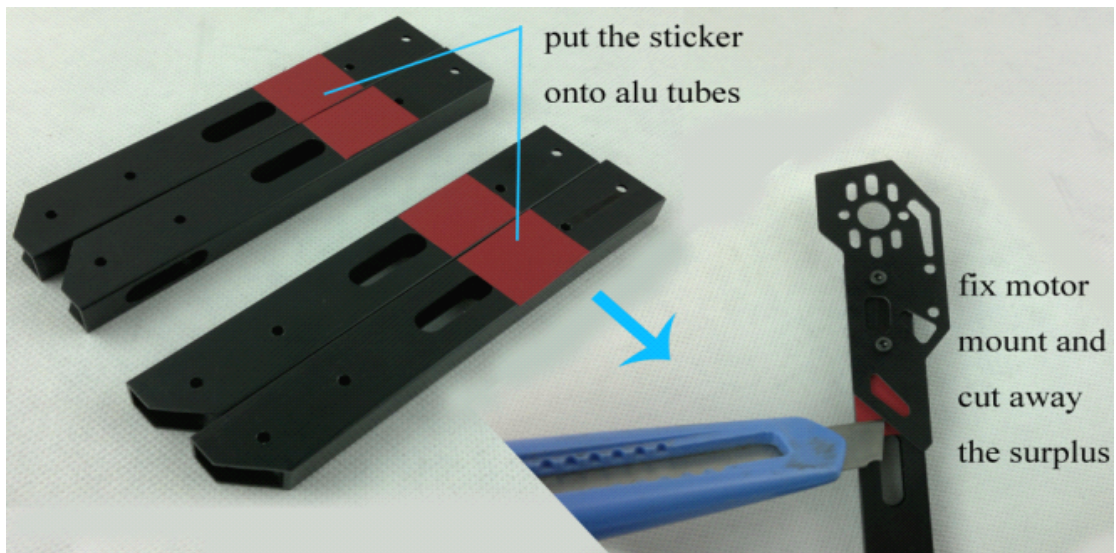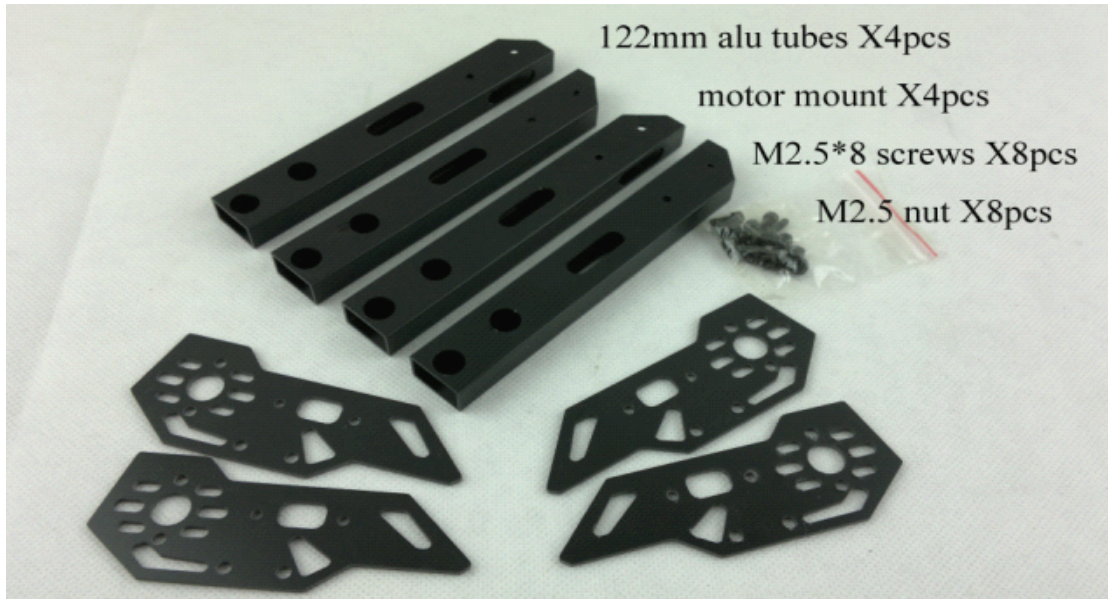

4. Arms fixed to frame assembly

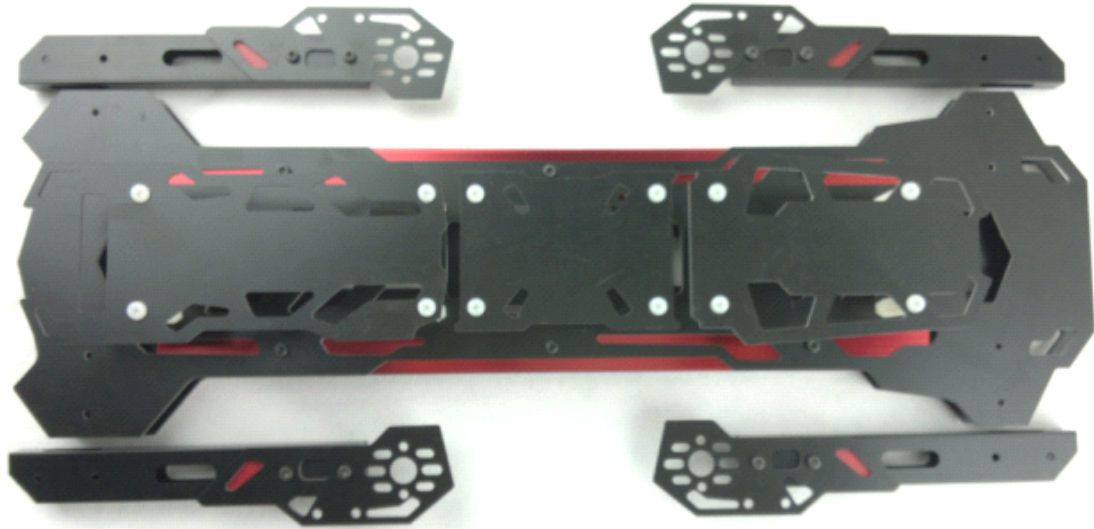

main frame X1pcs; arms X4pcs;
M2.5*18 screws X8pcs; M2.5 nut X8pcs



Arms can be fold freely before fixing the inner 4pcs screws, please fix the screws well when flying.

5. Landing gear assembly

